

# *COLOR BATHROOM FAN HEATER*

*STF-10*

## **INSTRUCTION MANUAL**



CAREFULLY READ THESE INSTRUCTIONS




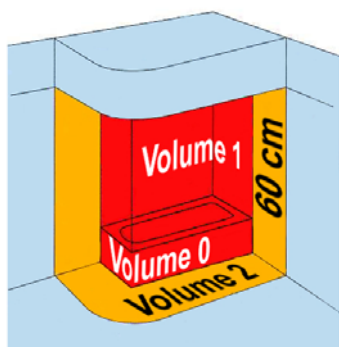 
## Safety Recommendations:

1. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
2. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children, except their age are over 8 years old and with supervision.
3. Children under 3 years must be kept away unless constantly monitored.
4. Children aged between 3 and 8 years must only turn on or off the unit provided it has placed or installed in its normal operating position expected and were trained and supervised in instructions for using the machine safely and understand the potential hazards.
5. Children aged between 3 and 8 years must not connect, adjust or clean the heater or perform user maintenance.
6. **WARNING** - Some parts of this product may become hot and cause burns. Particular attention must pay in presence of children and vulnerable people.
7. Read the instructions before using the appliance for the first time.
8. The appliance must be installed following national regulations for use.
9. It is necessary to be vigilant and supervise the appliance while children are close by.
10. This appliance is only designed for domestic and indoor use. Do not use outdoors. Use the fan heater only as indicated in the instructions. Any other use not in accordance with

manufacturer's instructions may result in property damage or personal injury.

 
11. Use this appliance in a well aerated and ventilated room. Do not cover the appliance or air flow.
12. Do not leave this appliance unsupervised while it is on. When not being used, always ensure that the product is securely in the 'Off' position (O) and unplugged from the socket.
13. Great care must be taken when being used by or in the presence of children or older persons.
14. If the power cable is damaged, it must be replaced by the manufacturer, their after-sales service or a similarly qualified person to avoid any hazards.
15. Do not place the cable under a carpet or any heavy object, and do not cover.
16. To avoid accidents, keep away from areas where people may trip. Do not place on unstable surfaces.
17. To avoid any risk of fire or electric shock, it is essential that the appliance not be exposed to rain or moisture, and not be opened. The appliance contains electric parts that may electrocute or burn you.
18. Do not place this appliance close to flammable fabrics, surfaces or liquids in order to avoid any risk of fire. Keep it well away from any source at risk of causing hazards and maintain it at a safe distance (whether this is the front, rear or sides). Do not use this appliance in locations such as garages, warehouses etc. where dangerous or flammable products are stored (paint, fuel, alcohol etc.).
19. This product is hot when it is on. To avoid any injuries or burns, do not touch it directly and use gloves or other means.
20. Do not use this heating appliance close to a bath, shower or swimming pool.

21. Check that the voltage corresponds to that of the power supply (230v mains socket) To avoid any risk of electric shock, plug the appliance in with the pins fitted correctly into the socket.
22. In the event that you need an extension cable, ensure that it is suitable for the appliance's power level.
23. If objects or liquids penetrate the inside of the appliance, unplug it and have it check by qualified persons.
24. While the appliance remains plugged into the socket (wall socket) it is not disconnected from the power supply, even if it is switched off. The appliance must be completely unplugged before cleaning, services, maintenance or even moving from one place to another.
25. The appliance must not be placed just underneath an electric socket.
26. WARNING: To avoid overheating, do not cover the fan heater.
27.  This symbol means that you must not cover the appliance.
28. It is advisable that you supervise children to ensure they do not play with the appliance.
29. Appliances are not designed to be used in conjunction with a separate timer or with a control system used at distance.
30. Do not put any item in the area next to the heater.



**WARNING:** In the bathroom, the heater can only be installed in Out of volume, means out of volumes 0, 1, 2, hidden volume according to the requirements of the French norm on the electrical installation NFC 15-100.

Remark: The diagram below is only given as an example.  
We suggest that you contact a qualified electrician for any help.

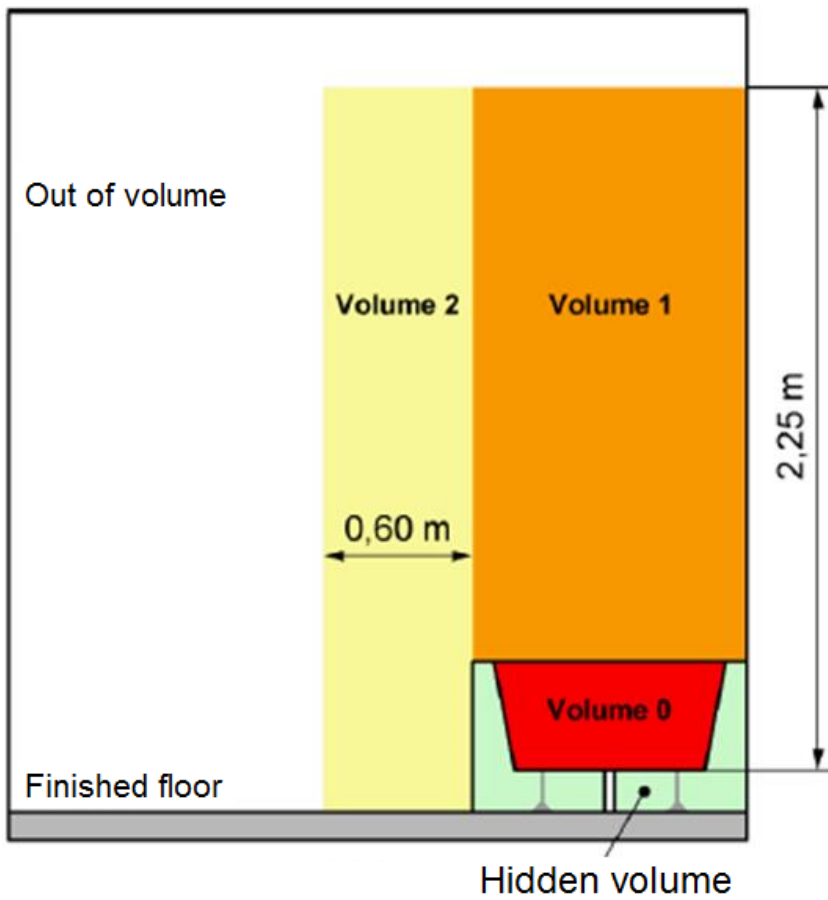

## TECHNICAL SPECIFICATIONS


Model No.	THSF026R / THSF026N		
Item	Color bathroom fan heater	Power 1 :	1000 W
Voltage:	220-240V~ 50Hz	Power 2 :	2000 W



CLASS II

This product conforms to the requirements set by directives 2014/35/EC (repealing directive 73/23/EEC amended by directive 93/68/EEC) and 2014/30/EC (repealing directive 89/336/EEC)
 
## COMPOSITION:

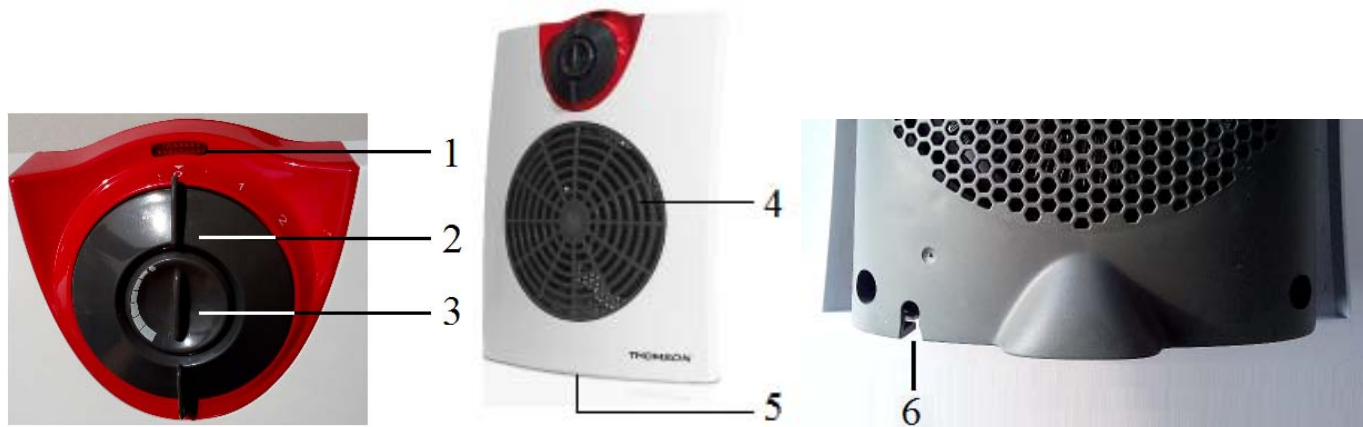

- 1) Indicator light
- 2) Off / power 1 / power 2
- 3) Thermostat

- 4) Air outlet
- 5) Cable storage (Space at bottom of heater)
- 6) Cable guide

## USING THE HEATER:

1. Before using this appliance, ensure that it is placed on a flat, stable surface. Take out the power cord from cable storage and pass through the cable guide.  
This appliance is equipped with an anti-tripping switch that switches the appliance off in the event that it tips over and is not placed on a stable surface.
2. Check that the voltage corresponds to that of the power supply (230v mains socket). Plug in the appliance.
3. Turn the thermostat dial in a clockwise direction towards "MAX. ", then turn the switch from "0" to "1 or 2 " to activate the heater, the indicator light will switch on.  
(0 = Off    1 = hot    2 = very hot)
4. After reached the desired temperature, to maintain the temperature: turn the thermostat knob counterclockwise until the light turns off. The desired temperature will be kept constant by the thermostat function.
5. The heater comprises a protection device protecting against overheating. If the fan heater overheats, a temperature limiting system inside the appliance will automatically cut the power supply.
6. The appliance can re-start as soon as the normal conditions and temperature needed for it to function are re-established. Identify the causes of this overheating to avoid any recurrences.
7. When not using this heater, return the 2 dials to their initial position: "0" and "MIN. ", and then unplug it.

## **PRECAUTIONS FOR USE AND MAINTENANCE:**

1. Always unplug the appliance and keep it away from any socket before cleaning.  
To clean the outer surface of the appliance, use a lightly damp cloth. Then, dry it thoroughly with a soft, dry cloth before using again.  
Do not use any cleaning or chemical products of any kind. Do not let water enter the openings on the heater.
2. When the appliance is not being used for prolonged periods, ensure that it is fully unplugged from the socket and store in its packaging for simple storage and later use.



The European directive 2012/19/EU on Waste Electrical and Electronic Equipment (WEEE), requires that old household electrical appliances must not be disposed in the normal unsorted municipal waste stream. Old appliances must be collected separately in order to optimize the recovery and recycling of the materials they contain and reduce the impact on human health and the environment.

The crossed out "wheeled bin" symbol on the product reminds you of your obligation, that when you dispose of the appliance it must be separately collected. Consumers should contact their local authority or retailer for information concerning the correct disposal of their old appliance.

**KEEP THESE INSTRUCTIONS**